

Replace Latch (continued)

- i. Assemble the swing bolt assembly to the handle.
- j. Insert the handle and attach it to the bracket using hinge screws and self locking nuts.

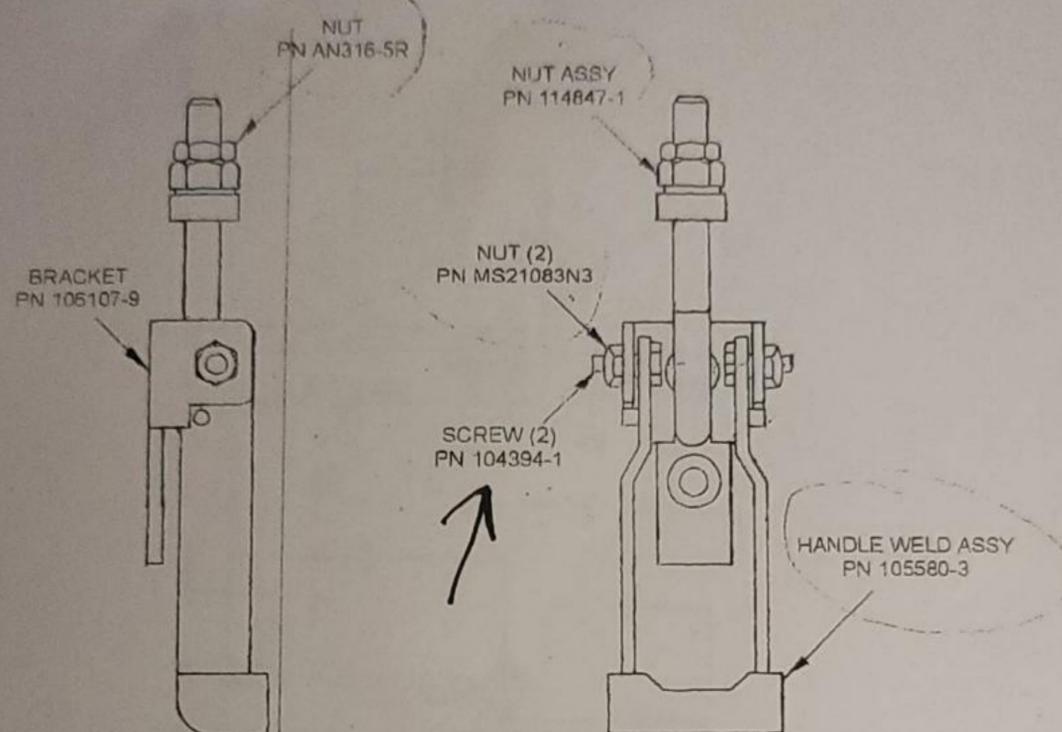


Figure 4-2. Latch, 5166225

WARNING

Read the Material Safety Data Sheet (MSDS) for grease/MIL-G-21164. The precautions, procedures and special protection information concerning the grease shall be followed.

- k. Apply a thin coat of grease/MIL-G-21164 where handle of latch contacts aluminum base and where drawbolt contacts the handle prior to installation in container base.
- l. Remove any excess grease from exposed areas of installed latch with a clean cloth. Do not use degreasers.

4-2. Replace latch.

NOTE

Latch shall be removed and replaced as a unit.